


# INSTRUCTION MANUAL

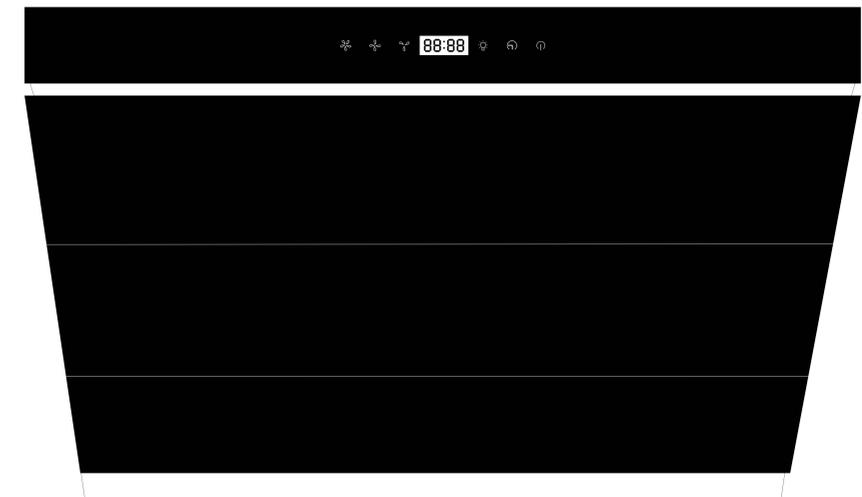

Model no.:LT- JS7101-30B


Thank you!

Dear User, thank you for purchasing our Range Hood. We manufacture exquisite appliances that are expertly crafted with the finest materials. Before using our Range Hood, please take some time to read through this Product Manual (manual). It will familiarize you with important safety, operation and maintenance instructions, as well as help maximize your culinary experience.

We ensure the continued dependable and superior performance of all appliances so as to satisfy your needs. Before using the Range Hood, you must follow the instructions, as specified in this manual. Any damage resulting from the improper operation and/or maintenance of the appliance may result in the loss of warranty. The warranty will become invalid, and your warranty application, whether direct or indirect, will not be accepted.

If you would like to apply for a warranty, please provide the product's model and serial number, which can be found on the nameplate attached to the upper wall of the range hood.

Please refer to illustration below for the location of the nameplate.

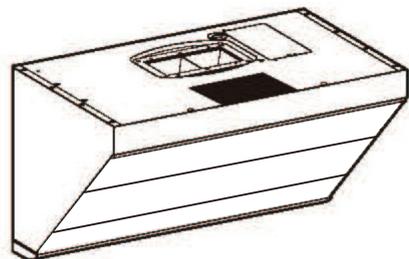

## Contents

1 Safety Information .....	02
2 Operation .....	05
2.1 Product Information .....	05
2.2 Operation .....	05
3 Cleaning and Maintenance .....	06
4 FAQ .....	08
5 Service Information .....	09
6 Installation .....	09
6.1 Installation Instructions .....	09
6.2 Product dimensions .....	10
6.3 List of Accessories .....	11
6.4 Installation Tools .....	12
6.5 Installation Procedure .....	12
6.6 Test Run After Installation .....	15

In order to ensure the safe and efficient use of appliances, please take note of the following types of highlighted information that will be outlined throughout this manual:

**IMPORTANT NOTE** highlights information that is particularly important.

**CAUTION** signals a situation where minor injury or product damage may occur if instructions are not followed.

**WARNING** states a specific hazard that may cause serious injury or death if precautions are not followed.

## SAFETY INFORMATION

In order to prevent accidental damage to the Range Hood and/or bodily injuries as a result of its operation, please read the following safety information installing and/or using this appliance. Following the instructions carefully will significantly reduce the risk of fire, electric shock and/or bodily injuries to persons. We recommend that you keep this manual for future use and/or in case of transfer of ownership of the range hood.

### **important Note:**

- This appliance is intended for indoor home cooking only; it cannot be used for outdoor cooking.
- Check the appliance for damage after unpacking it. If you detect any obvious damage to the product, do not proceed with the installation. Please contact us 312-225-3008
- Avoid placing gypsum powder, construction dust, etc. within close proximity of the range hood.
- When operate the range hood only in the manner outlined in this product manual.
- When operating the range hood, do not leave the appliance unattended. If you have any questions and/or concerns, please contact us 312-225-3008
- Operate, clean and maintain the range hood in accordance to the instructions outlined in this manual. Clean the metal grease filter according to the instructions.
- If the range hood has not been in operation for an extended period of time, unplug the appliance.
- **Please make sure correct installation and maintenance of the appliance.** Installation work

and electrical wiring must be done by qualified person(s), in accordance with all applicable codes and standards, including fire-rated construction codes and standards. The installation personnel should be responsible for normal operation of the appliance at the installed position.

- When operating the range hood in exhaust mode, ensure to install the damper along, with the hood.
- For general exhausting only. Do not use this range hood to exhaust hazardous and /or explosive materials or gas.
- In order to reduce the risk of fire, all exhaust pipes, flues and devices should be nonflammable. Use only metal duct cover and metal duct pipes. Never cover the hood with flammable plastic film or paper.
- \* Please read the specification label on the range hood for further information and requirements.

### Caution:

- When applicable local regulations comprise more restrictive installation and/or certification requirements, the aforementioned requirements will prevail, and installation personnel must conform to these requirements.
- The operating temperature of the range hood should not exceed 104 °F (40°C).
- Please do not place anything on top of the product. Anything placed on top may fall off or incline. For example, if you place seasoning bottles on top, the inclination may cause liquid to flow inside the product, resulting in damaged electrified components and therefore unnecessary risks. Our company will not bear the responsibility for free repair in case of product damage due to the above reason.
- Clean the Grease Cup frequently to prevent overflow. The resulting grease is inedible!
- When cutting or drilling into the wall or ceiling, be careful not to damage electrical wiring, water pipes, gas lines, or other hidden utilities.

· Adhere to the heating equipment manufacturer's guidelines and safety standards, such as those published by the National Fire Protection Association (NFPA), the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE) and the local code authorities. Meanwhile, conform to the safety standards issued by such administrative departments as fire department.

· When gas burners are in operation without any cookware placed on them, they can build up a lot of heat. A ventilation appliance installed above the cooker may become damaged or catch fire. Only operate the gas burners with cookware on them.

· Adhere to the voltage and frequency settings listed in this manual to avoid possible damages to the range hood.

· Please use standard accessories provided by our company to prevent the range hood from falling down accidentally. The hole drilled in the wall should precisely match the size of the expansion pipe, otherwise, the range hood may loose and fall down.

· Tampered glass is applied to the products of the company and the tampering treatment of the glass determines the extremely little possibility of spontaneous explosion. If the occurrence of spontaneous explosion is not due to improper use, our company promises free replacement of the accessories.

Warning:

#### Risk of Electric Shock

A defective appliance may cause electric shock. Never switch on a defective appliance. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box in case of problems, and contact us

· The range hood should be connected to a standard power socket with safe grounding. Midway connection, prolonged electric line or multi-socket wiring may cause electric shock, overheating and, in some cases, result in a fire. Installation of the range hood should be performed by professional electricians in strict

accordance with electricity standards and regulations of the local area. Before connecting the rod, turn off the power source and take appropriate measures to prevent auto closing of the power switch.

· In order to prevent electric shock and/or other bodily injuries to persons, do not exceed 120V AC input.

· Do not install the range hood in a bathroom and/or a humid area, as this will significantly increase the risk of electric shock.

· If a wire is damaged or defective, contact us to replace the wire.

· Do not change, stretch, knot, pressure or squeeze the wire as any resulting damage can result in electrical and/or fire hazards.

· Prevent water from coming into contact with the range hood's electrical components, such as the motor, switch and connector. Do not wash the appliance with water. Do not use the appliance if it is wet, as electric leakage and/or electric shock may occur. Do not attempt to change the range hood's internal wiring system. Improper modifications and/or repairs to the internal wiring can result in bodily injuries to persons, electric shock and/or a fire.

· In order to avoid electric shock, remember to turn off the appliance's power source before installation, cleaning and/or maintenance service.

· Avoid using high-pressure detergents and/or steam cleaners on the appliance, as they may result in electric shock.

· Do not touch the plug or switch with wet hands, as an electric shock may occur.

#### Grounding Instructions

· This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

· Improper grounding can result in electric shock.

· Consult a qualified electrician if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.

· Do not use an extension cord. If the power supply cord is too short, have a qualified electrician install an outlet near the appliance

#### Risk of Fire

· In order to reduce the risk of fire and to properly exhaust air, always duct the air outside. Do not vent exhaust air into spaces within walls, ceilings, attics, crawl spaces and/or garages.

· In order to prevent the risk of fire, the range hood should be operated and maintained in accordance to the instructions.

· Hot oils may ignite and burn quickly. Never leave hot oils unattended.

· Clean the hood's Grease Cup at regular intervals, as leftover grease deposits may ignite.

· Never operate the range hood without the Grease Cup filter attachment.

· Never work with naked flames close to the appliance (e.g. flambéing). Do not install the appliance near a heat-producing appliance for solid fuel (e.g. wood or coal). There must be no flying sparks.

· Avoid cooking with food products that produce flames under the range hood.

#### To Reduce Risk of Cooktop Grease Fire:

A) Never leave surface units unattended at high settings. Boilovers cause smoking and greasy spillovers that may ignite. Heat oils slowly on low or medium settings.

B) Always turn the hood on during cooking.

C) Clean ventilating fans. Grease should not be allowed to accumulate on fan, filter or in exhaust ducts.

D) Use proper pan size. Always use cookware appropriate for the size of the surface element.

To Reduce the Risk of Injury to Persons in the Event of a Range Top Grease Fire, Observe the Following:

· Smother flames with close-fitting lid, cookie sheet, or metal tray, then turn off the burner. Be careful to prevent burns. If the flames do not go out immediately, evacuate and call the fire department.

· When the cooking utensil catches fire, switch off the range hood immediately. Effective extinguishing measures must be taken at once, such as covering the open flame with metal cover, turning off the master gas valve and keeping flammable substance from the open flame etc. )

· Never pick up a flaming pan—you may be burned.

· Do not use water, including wet dishcloths or towels—a violent steam explosion will result. Use an Extinguisher Only If:

· You know you have a class ABC extinguisher and you already know how to operate it.

· The fire is small and contained in the area where it started.

· The fire department is being called.

· You can fight the fire with your back to an exit.

#### Risk of Injury.

· This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

· The range hood may have sharp edges. Be careful to avoid cuts and abrasions during installation and cleaning. Do wear qualified protective gloves.

- The accessible parts become very hot when in operation. Never touch hot parts. Keep children at a safe distance.

- Do not touch lamps during or soon after operation. Burns may occur.

- Do not insert your limbs and/or foreign objects into the impeller while the range hood is in operation, as that action might cause injury.

- This appliance is not intended for operation with an external clock timer or a remote control.

- Incorrect repairs are dangerous. Repairs may only be carried out and damaged power cables replaced by one of our trained after-sales technicians...

- If any abnormalities and/or defects occur while operating the range hood, immediately turn off the appliance and unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Then, contact our authorized service center. Abnormal operation and defects may cause hazardous situations, such as electric shocks and fires.

Risk of Suffocation:

- Packaging material is dangerous to children. Never allow children to play with packaging material, which may cause suffocation. Keep all packing material out of proximity to children. Please remember that packaging materials should not be treated as toys.

Risk of Death:

- Risk of poisoning from flue gases that are drawn back in.

- Always ensure adequate fresh air in the room if the appliance is being operated in exhaust air mode at the same time as room air-dependent heat-producing appliance is being operated. Exhaust gases through the flue (chimney) of fuel burning equipment to prevent back drafting.

- We do not responsible for injuries caused by improper and/or incorrect operation of the range hood.

## OPERATION

### Warning


1. Do not use excessive force to press buttons on the control panel.
2. Turn off gas burners without any cookware placed on them.
3. Do not disassemble the appliance with power on and/or without complying with instructions.
4. Clean the Grease Cup frequently to prevent overflow and a potential fire.
5. Disassembly and/or servicing of the range hood must be performed by qualified technicians.
6. Do not let the stove fire burn the range hood directly.

### Product Information

Model	Model	
Produce size L*D*H	30" x18.5" x17.4" (760 x470 x442 mm)	
Net weight	70lbs(32 Kg)	
Voltage/Frequency	120V/60Hz	
Rated power input of the range hood	226 W (light power included 20W x 3 )	
Noise	high setting	68dB(A)(5.4Sones)
	medium setting	63dB(A)(3.5Sones)
	low setting	53dB(A)(1Sones)
Max static pressure	380 Pa	
<p><b>Caution:</b> 1. The dB(A) noise in the above table is tested in accordance with IEC60704 standard, which indicates the sound power level. Pressure level, to answer for: High setting 54 dB. medium setting 49 dB, low setting 39 dB.</p> <p>2. The noise --Sones -- in the above table is tested in accordance with HVI-915-2015 in HVI-accredited laboratories in American.</p> <p>3. Such parameters as noise may have a deviation of less than 5%.</p>		

### Operation

1. Range Hood Control Panel

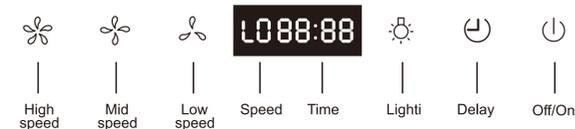

#### (1) ⏻ Off/On

Touch Off/on button, the door will be open, then touch speed button, the hood will start operation. If you touch Off/on button again the hood will automatically turn off after 60 seconds. By touching the third time, to stop operation immediately. ps: Under the hood is operation. The door will be closed automatically without any operation in 3 min.

#### (2) 🌀 High speed

Touch High speed, the fan runs at High speed.

#### (3) 🌀 Mid speed

Touch Mid speed the fan runs at Mid speed.

#### (4) 🌀 Low speed

Touch low speed the fan runs at low speed.

#### (5) ☀️ Light

This range hood offers an upgraded illumination mechanism and has 2 light intensity levels. By touching the light button. A low intensity is set. If you touch the button again, higher light intensity is set. By touching the button third time, the light will turn off.

#### (6) ⏸️ Delay

When the hood is operation touch "Delay" button to enter delay setting mode, Press high speed and low speed button to set it, 2-30 min is available to set.

## CLEANING AND MAINTENANCE

### Important Note:

Reattach the grease filter after cleaning and maintenance of the range hood. Do not operate the appliance without the grease filter, as it may cause safety hazards.

### Caution:

Risk of damage due to corrosion.

- Always switch on the appliance while cooking to avoid condensation. Condensate can produce corrosion damage.

- Surface damage due to incorrect cleaning.

Clean stainless steel surfaces in the direction of the grain only. Do not use any stainless steel

cleaners for operator controls.

- Surface damage due to strong or abrasive cleaning agents.

- Replace faulty LED lights to prevent the remaining lights from overloading.

### Warning:

- The range hood should only be cleaned as instructed; otherwise, it may ignite.

- Please remember not to wet the motor and/or the control panel, as it may result in damaging the electric circuits or potential hazards.

- Do not clean the appliance with chemical agents, such as gasoline, acids, benzene and solvents.

Risk of Electric Shock:

- Penetrating moisture may result in an electric shock. Prior to cleaning and maintenance, pull out the mains plug or switch off the circuit breaker in the fuse box.

- Do not use any high-pressure cleaners or steam cleaners, which can result in an electric shock.

Risk of Fire:

Grease deposits in the grease filter and Grease Cup may catch fire.

Risk of Injury:

- Unplug the appliance from the mains or switch off the circuit breaker in the fuse box before installation, cleaning, maintenance and repair in order to avoid electric shock.

- The range hood may have sharp edges. Be careful to avoid cuts and abrasions during installation and cleaning. Do wear qualified protective gloves.

- While the range hood is in operation, do not insert your hand into the area housing the fan.

- The appliance will become hot during operation, especially near LED lights. Allow the appliance to cool down before cleaning. Do not touch lamps during or soon after operation. Burns may occur.

- If you would like to schedule a deep cleaning for

your appliance, please contact us.

We suggest that you clean the surface of the appliance for better use.

1) Neutral detergent may be used to clean stains on the range hood. However, avoid touching the control panel. Wipe some detergent on the stains and let the detergent sit. Do not let the detergent sit for an extended period of time, as it can cause damages to the appliance's surface. Then, wipe off the stain with a soft cloth and the left detergent with a slightly wet cloth. Next, use another cloth to dry the appliance.


2) Stains on the range hood should be cleaned within a short time period, as to prevent the stains from becoming permanent.

3) Abrasive detergents, such as a salt solution, disinfectant or bleach powder cannot be used to clean the appliance. Wipe off the detergent with a wet, soft cloth. Next, use another cloth to dry the appliance.

**Warning:** Do not clean the appliance with abrasive tools, such as steel wool, brushes, and coarse cloths, as these materials will permanently scratch the surface of the hood.


### Preparations before Cleaning:

1. Unplug the appliance.

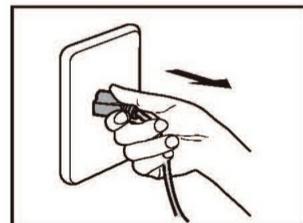


2. Clear the cookware on the burners.

3. Prepare a neutral detergent and a soft cloth (or soft brush) for stain removal and cleaning.

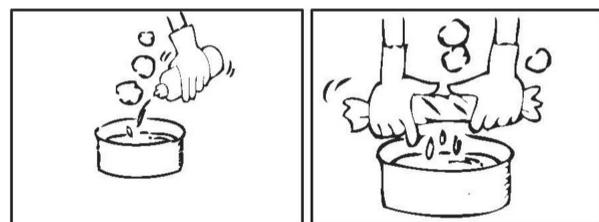


### Washing and cleaning the surface, Grease Cup, and grease filter: (The cleaning can be done by the user)

1. Clean the surface of the range hood.

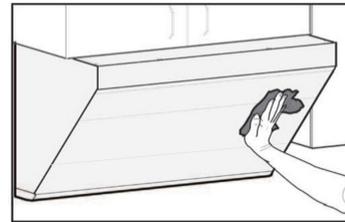


2. Remove the Grease Cup and clean it.

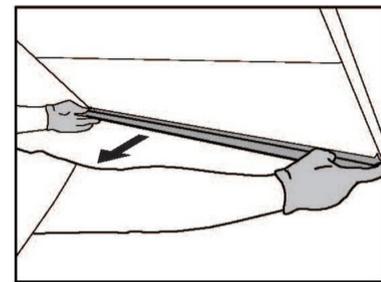


**Warning:** For the safety of you and your family, please regularly clean the oil accumulated in the Grease Cup and deposits on the Grease Cup surface. Do wear qualified protective gloves.


3. Lightly press the POWER button. The smoke baffle plate will open. Since the door will be closed after 3 min without any operation, please make sure power off when the door is open, then start to clean.

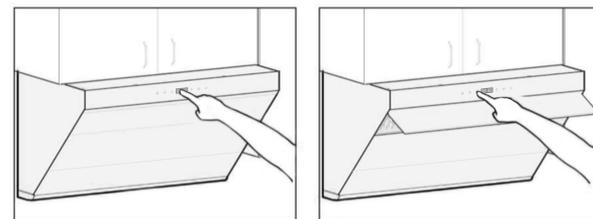

4. Use a screwdriver to remove the screws from filter on both side (1pc each side).

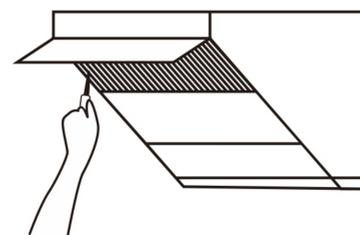


★Suggestion: In order to protect the health of you and your family, the filter should be cleaned regularly.

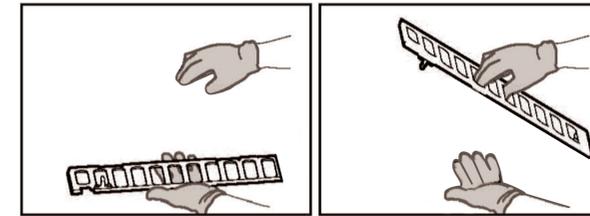


**Warning:** Please wear the qualified protective gloves in operation.

### Replacing LED Lights:


1. Lightly press the POWER button; The glass will open.

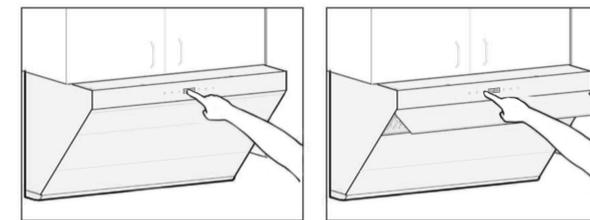


2. Unplug the appliance.

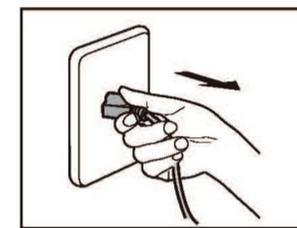

3. Use a small flat-head screwdriver to gently pry the LED assembly out.

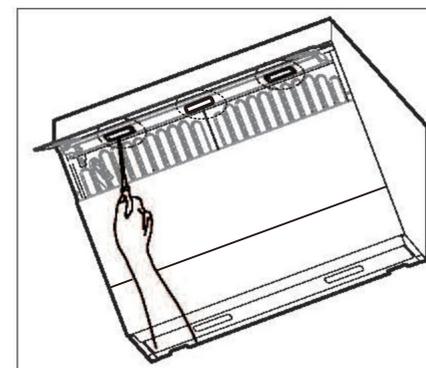

4. Disconnect the wires and then replace the LED lights.

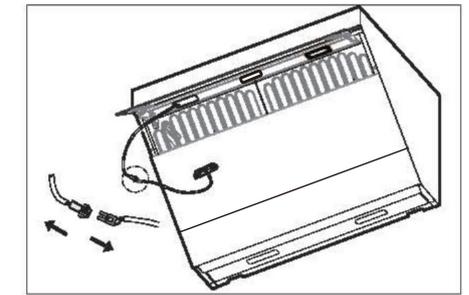

### Risk of Electric Shock:

Before changing the LED lights, unplug the appliance from the mains or switch off the circuit breaker in the fuse box.

### FAQ

#### Warning: Risk of Electric Shock

· Incorrect repairs are dangerous. Repairs may only be carried out and damaged power cables replaced by us.

· If the appliance is defective, unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact us.

· Before changing LED lights, unplug the appliance from the mains or switch off the circuit breaker in the fuse box.

· If any abnormalities and/or defects occur while operating the range hood, immediately turn off the appliance. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box and check the following:

Problem/Issue	Problem/Issue
After the POWER button is pressed, the range hood remains off and the button does not illuminate.	The appliance may be unplugged
The motor works, but the control panel buttons do not illuminate.	The appliance may be unplugged

If the problem/issue with the appliance still persists after ruling out the possible cause(s), please contact our authorized service center for assistance.

## SERVICE INFORMATION

### Warning


- If any abnormalities and/or defects occur while operating the range hood, immediately turn off the appliance. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Please contact us.
- The appliance must only be repaired by professionally trained and certified technician; otherwise, severe injuries may occur.
- Warranty service is not provided based on the following situations:
  - 1) Failing to show invoice issued by authorized agents.
  - 2) Damages of the parts due to the abused and wrong installation, improper use, improper location, carelessness or other factors.

## INSTALLATION

### 6.1 Installation Instructions

#### Important Note:

- Prior to installation, please read the Fotile Range Hood Installation carefully and save it for the local inspector's future reference.
- This appliance must be installed in accordance with National Electrical Codes, as well as all state, municipal and local codes.
- The appliance must be equipped with safe circuit breaker and installed with safe grounding.
- The correct voltage, frequency and amperage must be supplied to the appliance according to the proper voltage, frequency and amperage ratings listed on the product rating plate.
- Please record the model and serial number before installing the range hood. Both numbers are listed on the product rating plate, located on the upper wall of the hood. Refer to the illustration below.

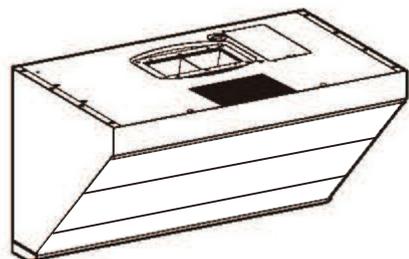

### Caution:

- Please carefully read all instructions prior to installation. Please give special consideration to the following items:

1. If you are renovating your kitchen, be careful to not expose the exterior of the range hood. Building materials, dust, paint, coating, and gases will corrode and tarnish the surface of the range hood. It is recommended that you install the range hood after all renovations are completed.
2. If you need to remove your gas burner before installation, please turn off the main gas valve first.
3. Do not connect the range hood duct to a duct used to exhaust hot air or fumes from another appliance.
4. Two installers are recommended due to the large size and heavy weight of the range hood. Since the installation is complex and the appliance is heavy, professional installers are required to install the appliance as outlined in this manual.
5. After the appliance fixed, the plug should be accessible.
6. Make sure to keep the appliance horizontally.
7. Ensure that the appliance functions normally after the installation is complete.

### Warning:

- In order to reduce the risk of fire, electric shock, or injury to persons, please carefully read the following:
  1. The installation and wiring of the appliance should only be carried out by a professional electrician in accordance with current national or local electric safety regulations, including fire-rated construction. Non-professional personnel should not conduct installation. Proper installation is the responsibility of the installer.
  2. Please use standard installation equipment and tools to ensure safe installation. Make sure to use the expansion tube and expansion bolt provided by our company, in case the range hood

falls down accidentally. The hole drilled into the wall should precisely match the size of the expansion tube, otherwise the range hood will not be properly secured to the wall and may fall down.

3. The range hood should be connected to a standard power socket with safe grounding. The midway connection, prolonged electric line or multi-socket wiring may cause electric shock, overheating and even fire. Power off before wiring and make sure proper measures have been taken to avoid unexpected connection.
4. During installation, switch off the circuit breaker in the fuse box during installation. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer.
5. The appliance should only be installed, removed and maintained by qualified technicians to prevent risks like electric shocks, falling or fires from occurring.

#### Risk of Injury:

- Unplug the appliance from the mains or switch off the circuit breaker in the fuse box before installation, cleaning, maintenance and repair in order to avoid electric shock.
- The range hood may have sharp edges. Be careful to avoid cuts and abrasions during installation and cleaning. Do wear qualified protective gloves.


#### Warning Before Installation

- Prior to installation, ensure that the exhaust outlet is free of debris, as they may damage the range hood.
- A straight and short ducting run will ensure a high performance of the range hood.
- A curving and long ducting run should be avoided, as it will lower the performance of the range hood.
- Strictly seal the connection between the duct and duct hole with duct tape. Ensure that the

connection between the duct and the duct cover is secure, and seal it with aluminum tape.

- A small duct hole will lower the performance of the range hood. Therefore, it is highly recommended that you cut a duct hole equal to or larger than 6" of the size.

### 6.2 Product Dimensions

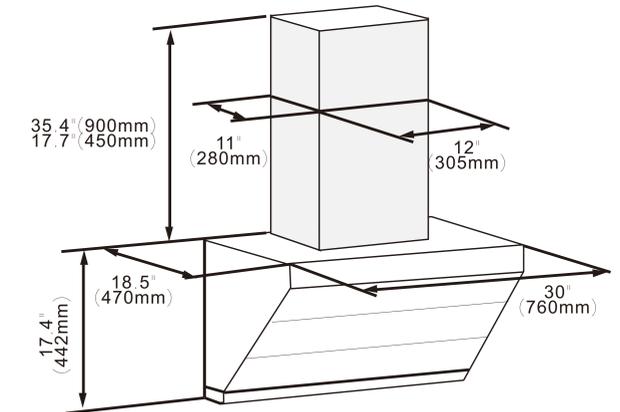

#### Wall Preparation

The wall should be strong enough to support the range hood. As for hollow wall or hollow plate, The minimum thickness of the lumber should be 13/16" (30mm). As for concrete wall, the installation can be directly operated. The range hood should be firmly fixed on the wall.


 
 
 
 
#### Ductwork Installation





##### Risk of Injury:

- Unplug the appliance from the mains or switch off the circuit breaker in the fuse box before installation, cleaning, maintenance and repair in order to avoid electric shock.
- The range hood may have sharp edges. Be careful to avoid cuts and abrasions during installation and cleaning. Do wear qualified protective gloves.
- When cutting or drilling into walls or ceilings, do not damage electrical wiring and other hidden utilities.
- Ducted fans must always be vented to the outdoors.
- To reduce the risk of fire and to properly exhaust air, always duct air outside. Do not vent exhaust air into spaces within walls, ceilings, into attics, crawl spaces or garages.


### 6.3 List of Accessories:

#### Packing List

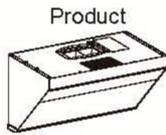Standard Configuration	
	1
	1
	1
	1
	1
	1
	1
	1
	5
	5
	4
	3

    Housing Assembly Accessories (optional)	
	1
	1
	1
	1
	4
	2
	2
	3
	3
	2
Decorative Plate Assembly Accessories (with upper cabinet)	
	1
	4
	2
	2

### 6.4 Installation Tools:

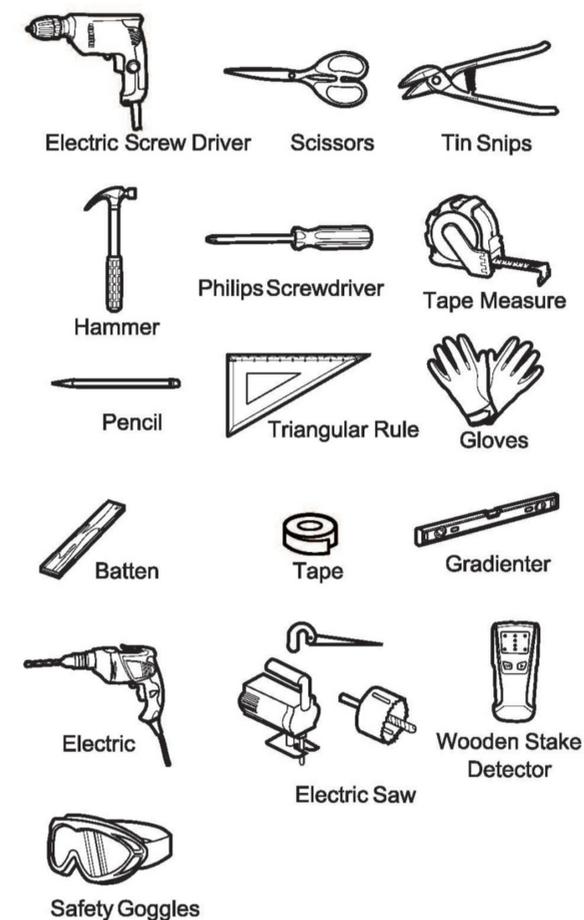


### 6.5 Installation Procedure:

In order to secure the safe use of the range hood and maximize its ability to ventilate cooking fumes, the installation height is suggested as follows: The distance from the countertop of the gas stove to the top board of the range hood shall not be less than 29 9/16"(750mm) and shall not be more than 32 1/2"(825mm). Where there are relevant laws Stipulating the mounting height of range hood in the state or region, the laws shall prevail. However, the effect of cooking fumes ventilation might be affected. The range hood can be installed in two ways, either with or without the upper cabinet.


**Caution:** One of the screws for duct bracket must be fastened to the wooden beam.

**Installation of the Range Hood with no Upper Cabinet(Method A)**


1. Unpack the appliance and check the List of Accessories.

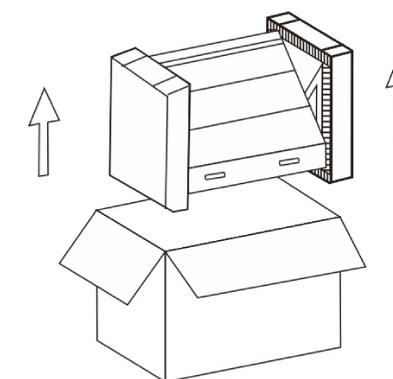


2. Please fold the following drawing in half along the dotted line

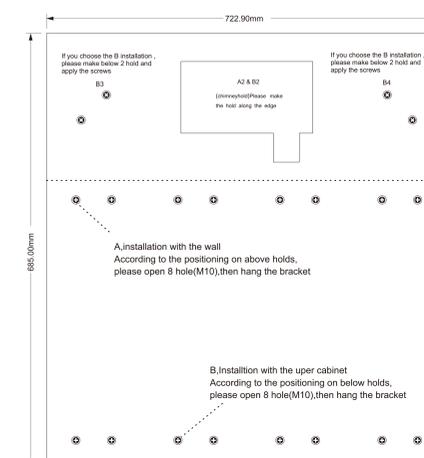


3. Please put the drawing paper to the wall like below pic (and make sure the position between the paper and the wall is accurate) then make the 8 hold ( M10) to hang the bracket, same time please along the chimney edge to cut the hold for chimney

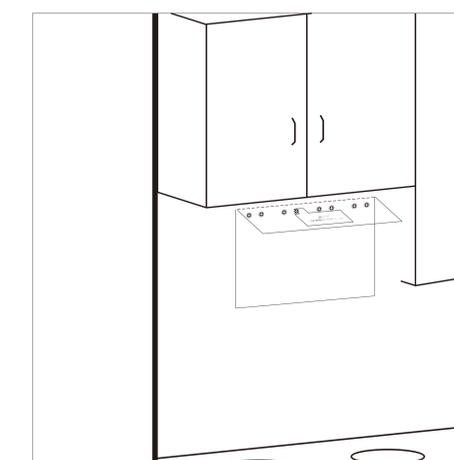


4. Locate the duct bracket according to the hold.

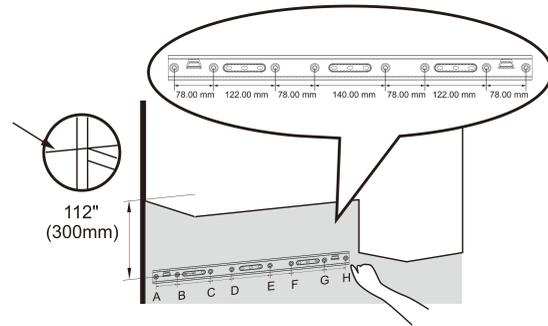


5. Lift and position the hood onto the brackets at the top of the backside while keeping an angle between the wall and the hood, and then push the hood against the wall tightly.

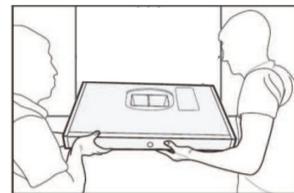

6. Place the gasket seal on the hood outlet and fix the duct cover with four screws of outlet housing. Then, secure the duct to the duct cover and seal the connection with aluminum tape.

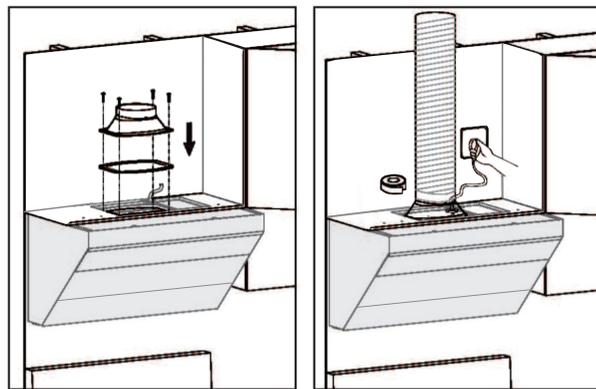



7. Make sure the hood is leveled. Install the Grease Cup, and plug in the appliance for a test run.

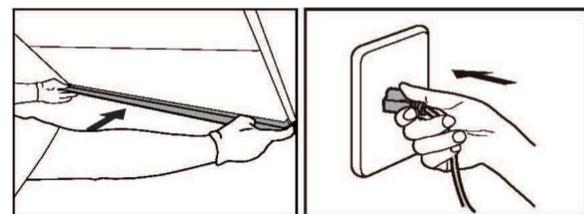


**Warning:** Please wear the qualified protective gloves in operation.

### Installation Instructions for the Duct cover

8. Tear off the protective film over the decorative cover and the blower housing; then install the decorative cover onto the brackets. Push the blower housing downward and lock it to the cover screws.

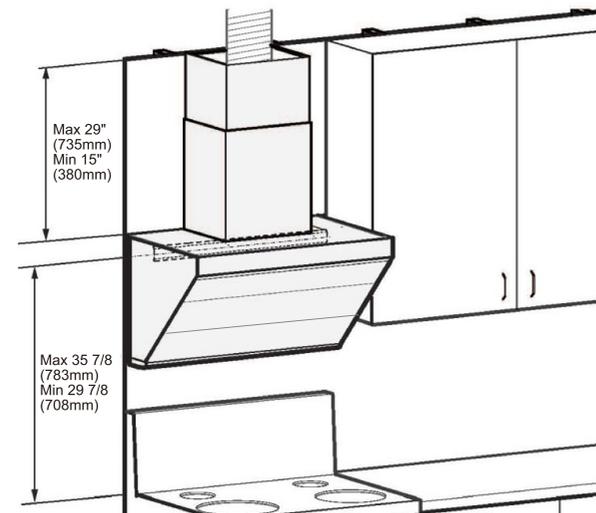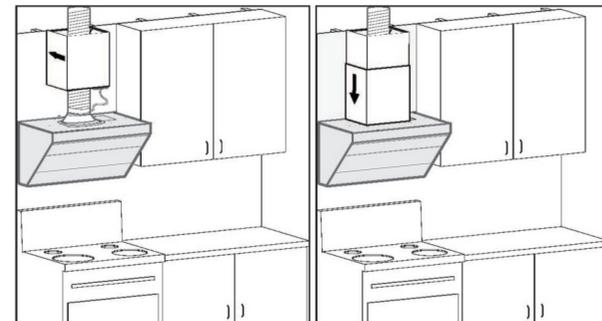


9. Install the Grease Cup.

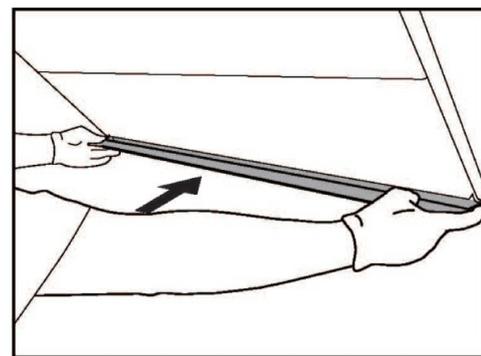


**Warning:** Please wear the qualified protective gloves in operation.

### Installation Instructions with upper cabinet (Method B)


1. Unpack the appliance and check the List of Accessories.

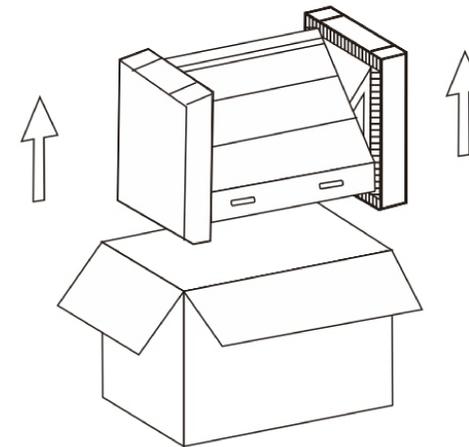


2. Please fold the following drawing in half along the dotted line

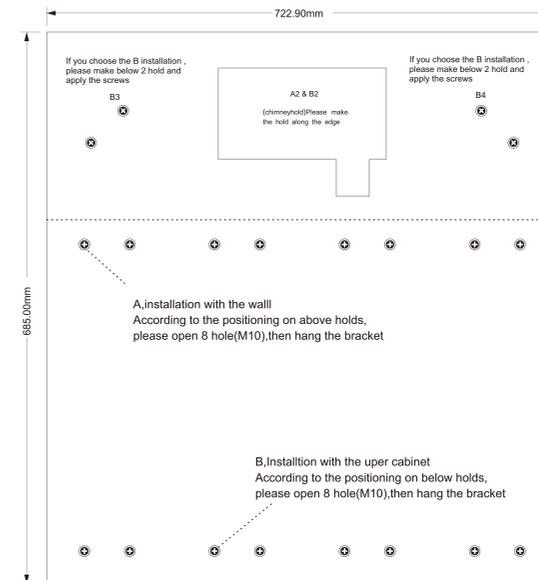


3. Please put the drawing paper to the wall like below pic (and make sure the position between the paper and the wall is accurate) then make the 8 bottom hold (M10) to hang the bracket, same time please along the chimney edge to cut the hold for chimney, finally make the 4 holds on top and apply 4 screws

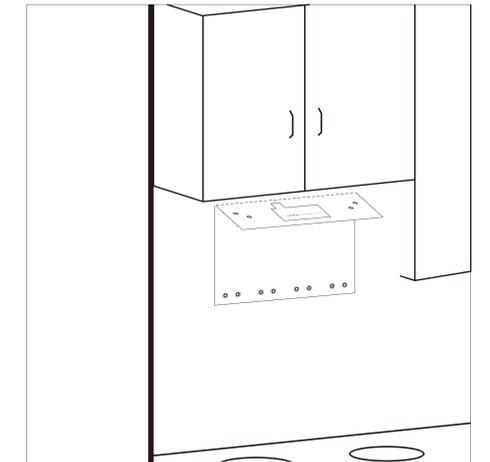


4. Locate the duct bracket according to the hold.

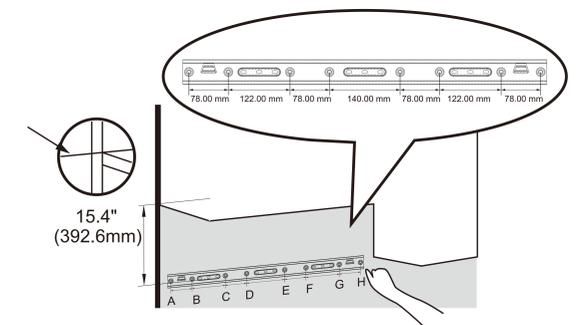


5. Lift and position the hood onto the brackets at the top of the backside while keeping an angle between the wall and the hood, and then push the hood against the wall tightly.

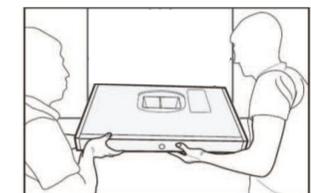

5. Place the gasket seal on the hood outlet and fix the duct cover with four screws of outlet housing. Then, secure the duct to the duct cover and seal the connection with aluminum tape

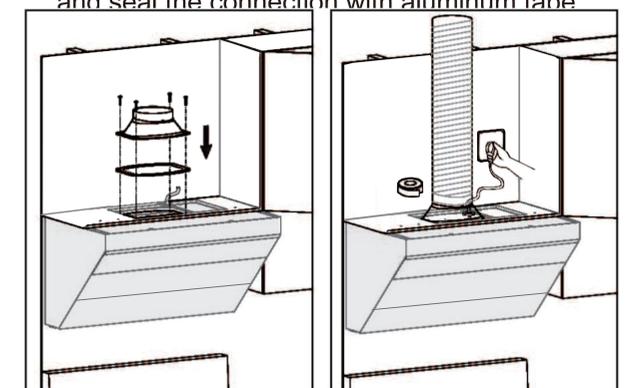

6. Make sure the hood is leveled. Install the Grease Cup, and plug in the appliance for a test run.

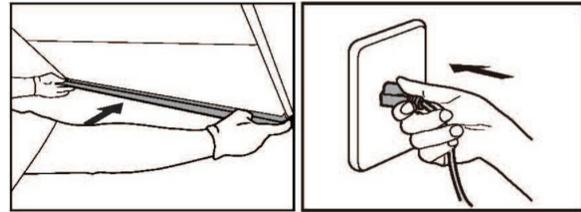


**Warning:** Please wear the qualified protective gloves in operation.

1. Lift and position the hood onto the mounting screws. Make sure the hood is stable and leveled by using a spirit level. Install the safety buffer baffle above the hood.



**Caution:** Two installers are required to ensure safe installation.

### Explosive View

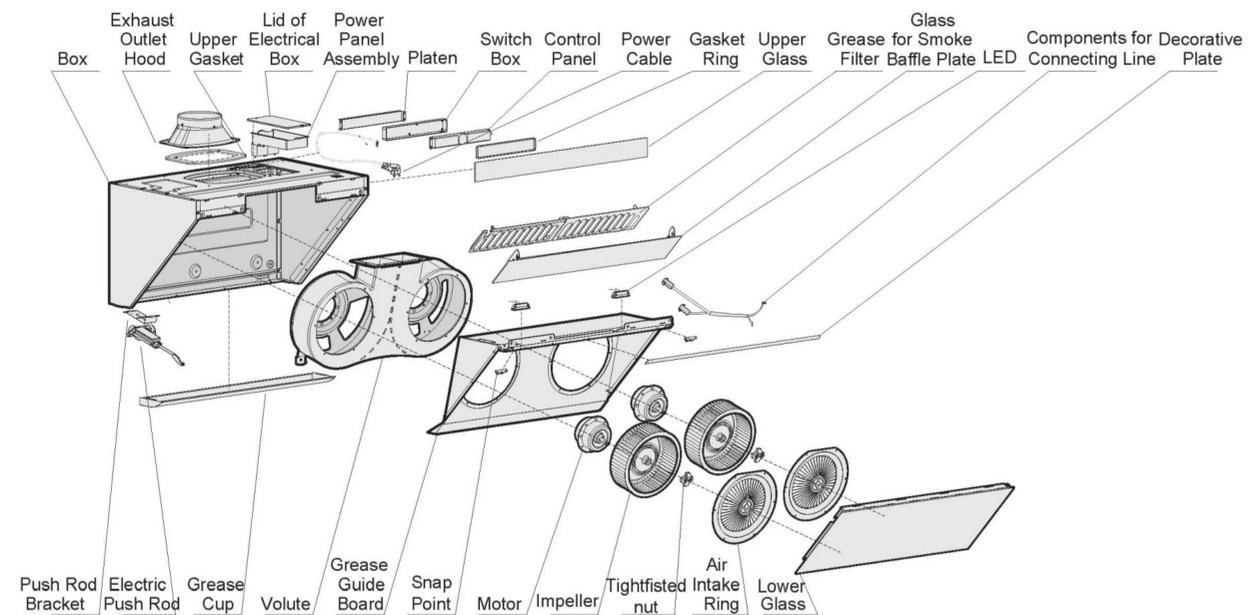

### 6.6 Test Run After Installation:

1. Lightly press the POWER button. Next, lightly press the LIGHTING button. At this time, the smoke baffle plate and lights should work normally.

2. Lightly press the fan buttons to check the motor. If any of the following malfunctions occurs, unplug the hood immediately and re-check the installation process. (If the malfunction continues, contact our authorized service center as soon as possible.)

- (1) The hood vibrates violently.
- (2) The impeller does not work.
- (3) The impeller grates while rotating.
- (4) The motor makes strange sounds.

3. Lightly press the POWER button again to turn off the fan and close the smoke baffle plate.